



HOW TO MEASURE

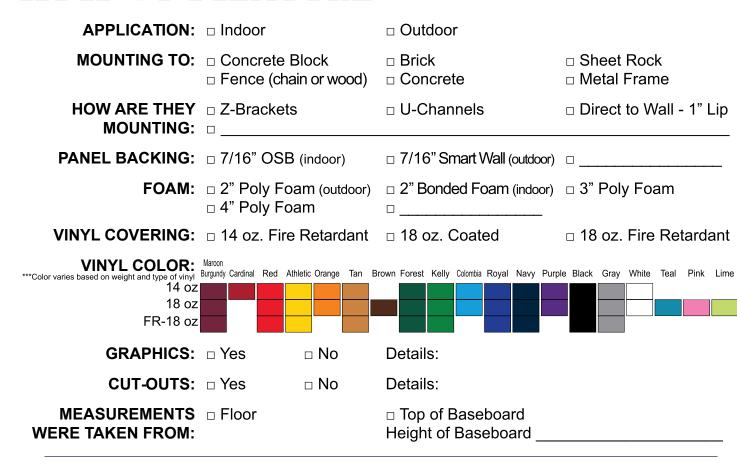

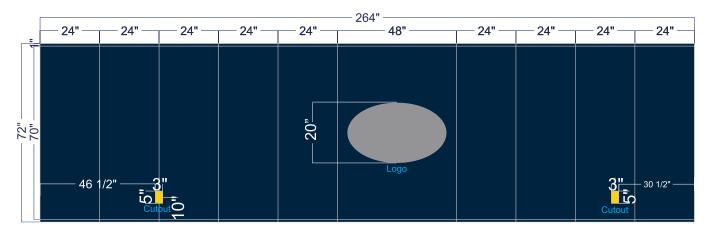

High x 48 inches Wide). Indicate if you are and bottom distances for these opening. measuring from the floor or from the bas board

When measuring a wall, the more details given for cut outs & art. Top and bottom of each cut the better. Begin by determining how tall & out should be included in your sketch, also wide the wall to be paneled is. (Standard is 72 include how far in the cut-out starts. Do not inches High x 24 inches Wide or 72 inches assume large openings are straight, give top

